

# NPK Service Bulletin

 
SB07-13B

**SUBJECT: HYDRAULIC HAMMER SERIAL NUMBER GUIDE**

**MODEL(S): H, E, GH AND PH SERIES HAMMERS**

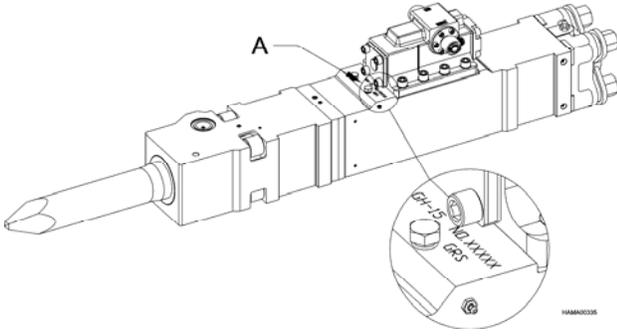
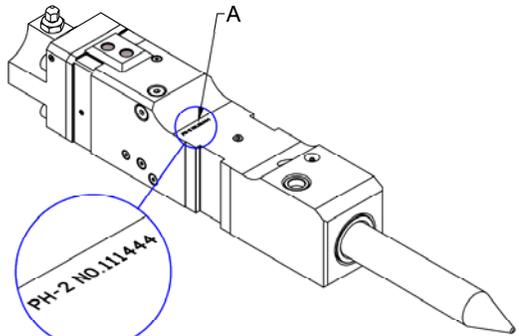
## ATTENTION

When ordering parts or performing repairs, always use the serial number to find information regarding your unit. The serial number is located on the hammer. The numbers found on the bracket may not always match the serial number found on the hammer.



<p style="text-align: center;">H06X - H4XE/H4XL</p>	<p style="text-align: center;">H6XA - H7X</p>
<p>A Serial number location 06X thru 4XE/4XL located on body near gas charge valve.</p> <p>B In addition, all 3XA's and 4X's along with older 06X's thru 2XA's have a secondary location for the serial number on the back side of the gas head.</p>	<p>A Serial number location 6XA and 7X located right of center on face of body below main valve.</p> <p>B In addition, a secondary location for the serial number on 6XA's and 7X's is found on the back side of the gas head.</p>

<p style="text-align: center;"><b>H8XA - H30X</b></p>	<p style="text-align: center;"><b>E200 - E207</b></p>
<p>A Serial number location 8XA thru 30X located right of center on face of body below main valve.</p> <p>B In addition, a secondary location for the serial number on 8XA's thru 30X's is found on the back side of the gas head.</p>	<p>A Serial number location 200 thru 207 located right of center on face of body below main valve.</p>
<p style="text-align: center;"><b>E208 - E225</b></p>	<p style="text-align: center;"><b>GH06 - GH6</b></p>
<p>A Serial number location is right of center on body above autolube port.</p> <p>B Secondary location for serial number on "E" Series hammers. (Back side of gas head).</p>	<p>A Located on the lower through bolt boss just below the main control valve.</p>

 <p style="text-align: center;"><b>GH7 – GH50</b></p>	 <p style="text-align: center;"><b>PH1 – PH4</b></p>
<p>A The serial number location is right of center on the body above the autolube port.</p>	<p>A The serial number location is located left of center on face of body between hammer ports and retaining pin.</p>