


NPK

HYDRAULIC HAMMER

TOOL MANUAL

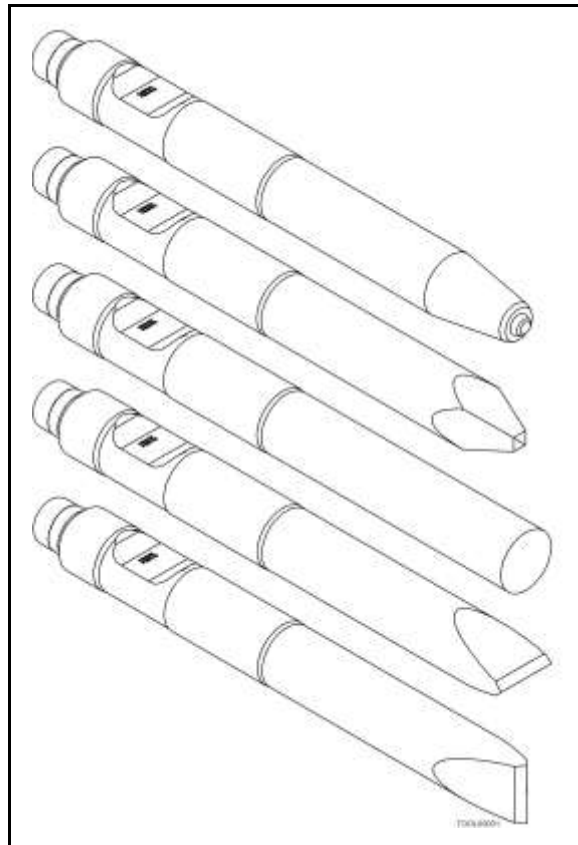

“Use Genuine NPK Parts”

NPK *...attachments;
designed, built
and backed by NPK.*

7550 Independence Drive
Walton Hills, OH 44146-5541
Phone (440) 232-7900
Fax (440) 232-6294

CONTENTS

SAFETY 2
INTRODUCTION..... 4
TOOL WARRANTY 5
PRECAUTIONS FOR USING NPK HAMMER TOOLS 7
IMPACT ENERGY TRANSMISSION THROUGH TOOLS 8
TOOL LUBRICATION 10
NPK HAMMER GREASE 11
CORRECT USE OF NPK TOOLS..... 12
TYPES AND APPLICATIONS OF TOOL 16
TOOL BREAKAGE..... 17
CHISEL TOOL SHARPENING..... 25
STANDARD LENGTH FOR NPK TOOLS 26
TOOL IDENTIFICATION..... 27
WARRANTY STATEMENT 28

SAFETY



Safety notices in NPK Instruction Manuals follow ISO and ANSI standards for safety warnings:



DANGER (red) notices indicate an imminently hazardous situation which, if not avoided, **will result in death or serious injury**.



WARNING (orange) notices indicate a potentially hazardous situation which, if not avoided, **could result in death or serious injury**.



CAUTION (yellow) notices indicate a potentially hazardous situation, which, if not avoided, **may result in minor or moderate injury**.



ATTENTION (blue) notices in NPK Instruction Manuals are an NPK standard to alert the reader to situations which, if not avoided, **could result in equipment damage**.

WARNING and BASIC OPERATING INSTRUCTIONS decals are included with each NPK hammer and installation kit. Decals must be installed in the cab, visible to the operator while operating the hammer.

STAY CLEAR, PRESSURE VESSEL, GAS PRESSURE and TOOL SHARPENING decals are installed on all NPK hammer models. Keep them clean and visible. NPK will provide decals free of charge as needed.



1. Operator and Service personnel must read and understand the **NPK INSTRUCTION MANUAL** to prevent serious or fatal injury.
2. **FLYING DEBRIS CAN CAUSE SERIOUS OR FATAL INJURY.**
 - Keep personnel and bystanders clear of hammer while in operation.
 - Do not operate HAMMER without an impact resistant guard between HAMMER and operator. NPK recommends LEXAN® or equivalent material, or steel mesh. Some carrier manufacturers offer demolition guards for their machine. Check with the carrier manufacturer for availability. If not available, please call NPK.
3. Do not hardface or sharpen the tool point with a cutting torch. Excessive heat from torching or welding can cause embrittlement, breakage, and flying pieces. Resharpen by milling or grinding only, using sufficient coolant.



SAFETY, CONTINUED

CAUTION

4. Fully extend the tool while charging the HAMMER with nitrogen gas. Be sure that the retaining pin is installed. STAY CLEAR OF TOOL POINT WHILE CHARGING.
5. Do not disassemble a HAMMER before discharging the hammer gas pre-charge.
6. **USE NITROGEN GAS ONLY!** Store and handle nitrogen tanks per OSHA regulations.
7. Avoid high pressure fluids. Escaping fluid under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or other lines.
8. Operate HAMMER from operator's seat only.
9. Match HAMMER size to carrier according to NPK recommendations. The carrier must be stable during hammer operation and during transport.
See CARRIER MACHINE COMPATIBILITY section of the NPK Hydraulic Hammer Operators Manual.
10. Do not make any alterations to the TOOL without authorization from NPK Engineering.
11. Use proper lifting equipment and tools when handling or servicing the HAMMER.
12. Wear ear protection and safety glasses when operating the hammer. Consult OSHA/MSHA regulations when applicable.
13. Beware of flying metal pieces when driving boom pins.
14. If modifications are to be made, **do not alter the HAMMER without authorization from NPK Engineering!**
15. Use only genuine NPK replacement parts. NPK specifically disclaims any responsibility for any damage or injury that results from the use of any tool or parts not sold or approved by NPK.

For further safety information, consult the AEM Hydraulic Mounted Breakers Safety Manual, AEM form MB-140 (NPK P/N H050-9600), which is furnished with every NPK hammer. To request an additional copy, please contact NPK at 440-232-7900 or Internet at www.npkce.com.



INTRODUCTION

This manual will assist NPK Dealers and Customers to obtain the longest possible life from NPK Demolition Tools.

Customers can use this manual to take corrective action when tool breakage occurs. Dealers can use this manual to determine if tool breakage can be claimed under warranty.

Refer to the NPK Demolition Tool Warranty statement for specifics of warranty coverage.

TOOL WARRANTY

STANDARD DEMOLITION and ACCESSORY TOOLS WARRANTY (30 days)


NPK Construction Equipment, Inc. ("NPK") warrants that new Standard Demolition Tools, and other Standard Accessory Tools sold by NPK will be free from defects in material or workmanship for a period of thirty (30) days, starting from the date of installation. NPK reserves the full right to determine if, and to what extent, warranty adjustments may be made for breakage of the demolition or other accessory tools. ***NPK Tool Warranty does not cover labor or travel expenses.***

THIS WARRANTY DOES NOT APPLY TO:

- Custom or special application tools which are excluded from warranty.

NPK RESPONSIBILITY

NPK will, at its option, replace with a new or reconditioned tool, any warranted tool that fails by reason of defective material or workmanship, free of charge delivered at a place of business of an NPK Dealer. Tool breakage is specifically covered ONLY for straight across breakage as shown at locations A: Note: The tool to bushing gap must be verified and reported to NPK. Failure to provide this information will make this failure non-warrantable, see pages 6 and 19.

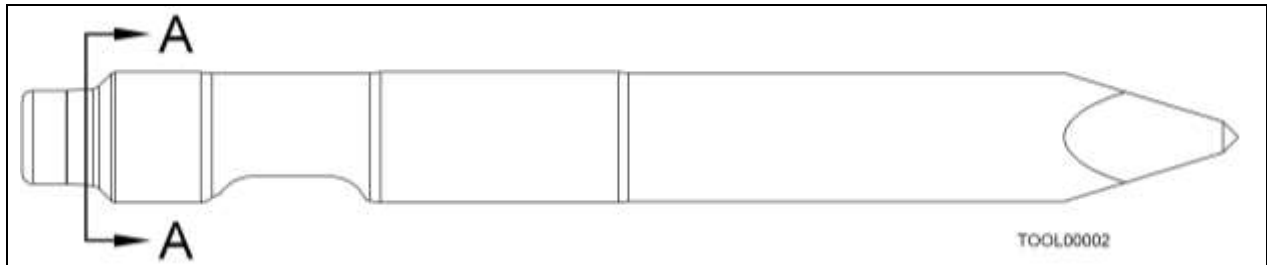


For warranted tool failures, a prorated credit, up to 80% maximum, will be issued for tools with tip wear greater than 50 mm on chisel andmoil points, or 30 mm on blunt end tools. Note: Parts replaced under warranty become the property of NPK.

TOOL WARRANTY, CONTINUED

USER RESPONSIBILITY

- **Photos and all numbers from retaining pin slot must accompany all warranties submitted to NPK. These photos can be 35 mm, polaroid, or digital.**
- The installer, user, operator, repairer, assumes responsibility to read, understand and comply with NPK's written INSTALLATION, OPERATOR, and SERVICE INSTRUCTIONS.
- All labor costs.
- Any expense incurred by field repair.
- Tool failures as shown at locations B (see NPK Operators Manual for correct operating procedures):

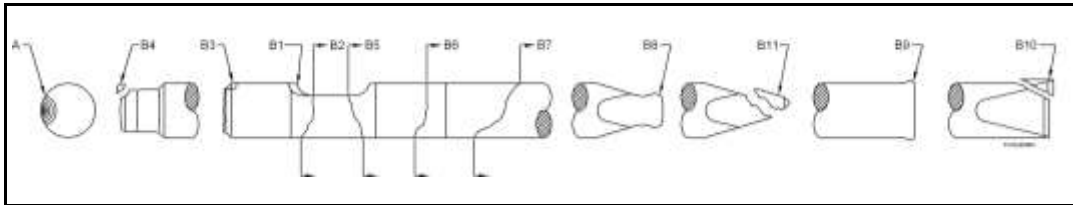

CAUSE OF FAILURE

A – Typical break from bending overload.
B1 and B2 – repeated blank hammering.
B2 – bending overload due to excessive wear of the tool bushings.
B3 and B4 – corner loading due to excessive wear of the tool bushings.

B5, B6 and B7 – bending overload from excessive prying or slant hammering.
B8 and B9 – deformation from overheating by hammering in the same position for more than 30 seconds.
B10 and B11 – chipped, due to wrong application, or overheating by hammering in same position for over 30 seconds.

THESE WARRANTIES DO NOT COVER FAILURES RESULTING FROM:

- Installation, alteration, operation, maintenance, repair or storage which NPK judges improper.
- Inadequate lubrication.
- Exceeding the tool and/or tool bushing wear limit.
- Unreasonable delay in making a repair after being notified of a potential product problem.

THESE WARRANTIES SPECIFICALLY EXCLUDE:

- Any tool which is altered, welded, hardfaced or resharpended.
- Replacement due to tip or shank wear.
- Installations not approved by NPK.
- Use of parts not sold by NPK. **THE USE OF “WILL FIT” PARTS WILL VOID THE WARRANTIES OF ANY AND ALL PARTS DAMAGED AS A RESULT OF THE FAILURE OF THE “WILL FIT” PARTS.**
- Parts shipping charges in excess of those which are usual and customary. (Air freight, unless pre-approved, will not be covered.)
- Duties, brokerage fees, and local taxes.


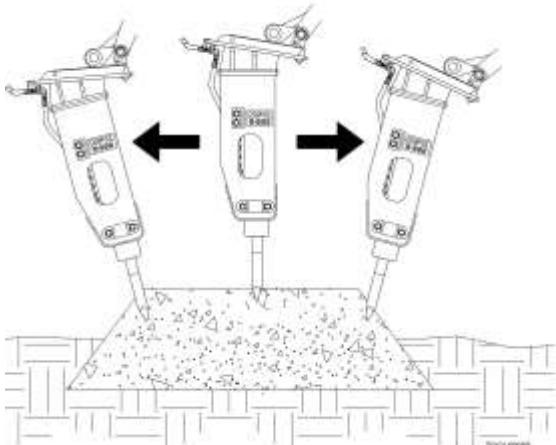
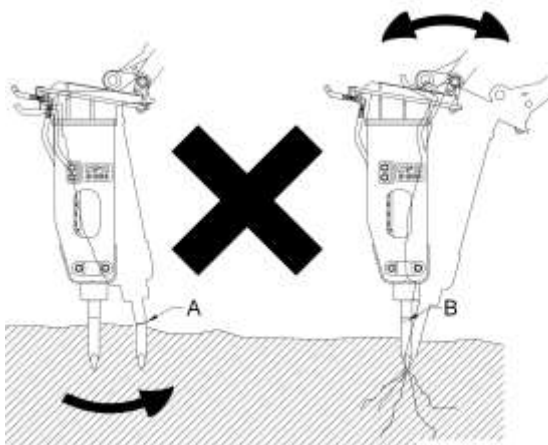
WARRANTY REPAIRS DO NOT EXTEND THE STANDARD WARRANTY PERIOD.

LIMITATIONS AND EXCLUSIONS

Violation of any federal, provincial, state or local laws, ordinances, rules or regulations, or removal or alteration of product serial numbers void NPK's written product warranties. **Application for warranty must be made within 30 days of failure.**

PRECAUTIONS FOR USING NPK HAMMER TOOLS


1. Avoid blank hammering.
2. Do not hammer in the same tool position for over 30 seconds.
3. Do not use the TOOL to move excessively large material, pry material, or as a pick on material.

	<p>Stop hammering immediately after the object is broken, see page 20.</p>
	<p>Change hammering location if the object does not break after hammering for 30 seconds, see page 21 for damage caused by hammering for extended periods of time.</p>
	<p>Prying can cause breaks (A) or cracks (B), see page 17.</p>

IMPACT ENERGY TRANSMISSION THROUGH TOOLS

A hydraulic hammer converts hydraulic power to kinetic energy. The kinetic energy is delivered by the hammer piston to the tool as an impact force.

Unlike a slowly transmitted force, such as the force with which a hydraulic cylinder extends, the impact force produced by the piston when it hits the tool is transmitted through the interior of the tool as a compression stress wave until it reaches the rock, concrete, or other material that the tool is about to break. The compression wave speed is equal to the speed of sound through steel, i.e., approximately 15,000 ft/sec. Therefore, if the tool is three feet long, the impact force reaches the object to be broken $1/5000$ (0.0002) second after the piston hits the tool.

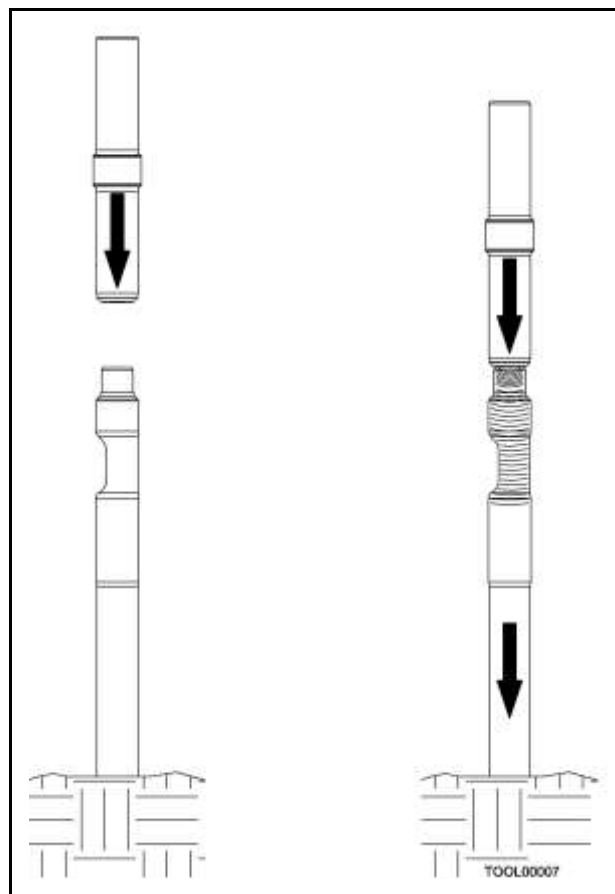


Impact force is transmitted as stress waves through the tool.


IMPACT ENERGY TRANSMISSION THROUGH TOOLS, CONTINUED

IMPACT STRESS WAVES AT THE END OF THE TOOL

When the tool is in contact with the material to be broken, most of the compression stress waves are transferred to the material, and the energy of the compression waves then breaks the material. However, not all the energy of the compression waves is transmitted to the material to be broken, part of it is reconverted into reverse compression, or tensile, waves that then travel back through the tool.

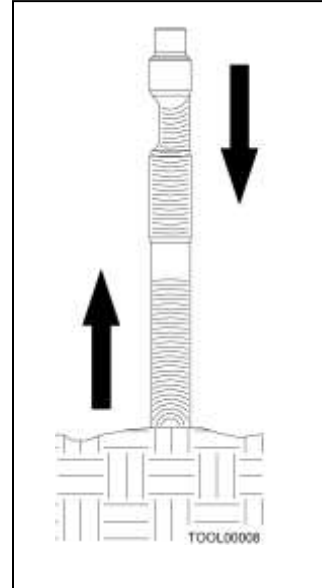

When the tool is not in contact with the material to be broken, the energy of the compression waves has nowhere to go and therefore, returns totally in the chisel as tensile waves. This is referred to as a “blank hammer blow”, see page 8.

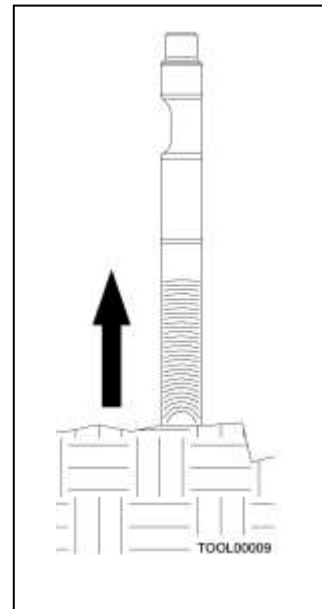

The compression waves and the tensile waves travel in a complex manner in the tool during hammer operation. While these waves are gradually being attenuated by the internal friction of the tool and by the friction between the tool and the tool holder bushings, the next impact strikes the tool. Excessively heavy contact between the tool and tool bushings causes uneven stress concentrations. This leads to premature tool failure, as seen in later sections of this manual.

TOOL LUBRICATION


Preventing premature tool and tool bushing wear requires a sufficient supply of the correct grease to the tool. The tool must be pressed against a hard surface until it stops up inside the hammer. This ensures proper distribution of grease between the tool and tool bushings.

GREASE INTERVALS

An automatic greasing system is recommended to reduce hammer tool and tool bushing wear. The NPK AUTOLUBE System is designed to automatically provide a continuous supply of grease to the hammer tool and tool bushing – increasing tool and tool bushing life by reducing wear. The AUTOLUBE pump is capable of pumping EP2 grease in cold weather. The pump output is adjustable according to the requirements of the hammer model and to compensate for tool bushing wear.

If the hammer is not connected to an AUTOLUBE system, the hammer must be greased at regular intervals to get the best life from the tool and tool bushings. There are two ways to determine grease intervals:

First, grease the hammer at the beginning of the job until grease comes out between the tool and the lower tool bushing. Run the hammer until the shank of the tool starts to look dry. This determines the time interval for the greasing of this particular hammer on this particular job. Typically, this is 1 to 4 hours. Also, note the amount of grease needed to re-grease the tool. This gives you the amount of grease and how often it must be applied. An example would be that a particular hammer, on a particular job, requires half a tube of grease every 3 hours. This would be the greasing schedule you would set up. If this hammer was moved to another job, another grease schedule may have to be determined.

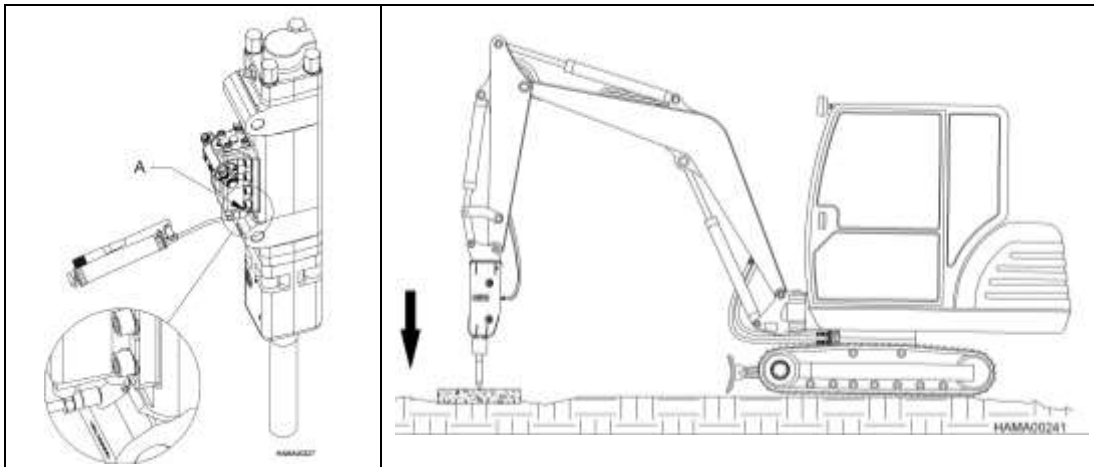

Second, if you can't control the grease schedule, such as rental units, then have the operator grease the hammer once every hour of hammer operation (A). Again, grease the hammer until grease comes out between the tool and tool bushing. This is usually more often than required, but is far cheaper than replacing prematurely worn tools and tool bushings.


CORRECT GREASE

The type of grease used is very important. NPK recommends a Lithium Base, Moly (Molybdenum Disulfide) or other surface protecting additives, EP (Extreme Pressure), NLGI #2 grease. A high drop point (500°F, 260°C) grease is desirable.

NPK HAMMER GREASE

NPK now offers hammer grease specially formulated to meet severe job requirements. The grease is available in three different temperature ranges - 350°, 500°, and 2000°. All are compatible with Autolube systems.

Universal Plus and *Super Duty* are lithium soap based products that resists washout and contain NPK-10 additive for surface protection in friction affected areas. *Chisel Paste* is an aluminum complex soap base with 12% graphite and copper additives for extreme operating conditions.

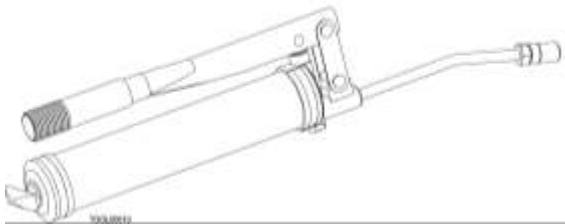

350°	500°	500°
NPK UNIVERSAL PLUS LITHIUM PLUS EP2 GREASE	NPK SUPER DUTY EP2 GREASE WATER RESISTANT	NPK CHISEL PASTE EP2 GREASE EXTREME TEMP. WATER RESISTANT

UNIVERSAL PLUS 350 deg	NPK PART NO.
14 OZ. CARTRIDGE	G000-1010
120 LB. KEG	G000-1020
35 LB. PAIL	G000-1030
400 LB. DRUM	G000-1040

SUPER DUTY 500 deg	NPK PART NO.
14 OZ. CARTRIDGE	G000-1011
120 LB. KEG	G000-1021
35 LB. PAIL	G000-1031
400 LB. DRUM	G000-1041


CHISEL PASTE 500 deg	NPK PART NO.
14 OZ. CARTRIDGE	G000-1050
*14 OZ. CARTRIDGE	G025-1050
35 LB. PAIL	G000-1060
400 LB. DRUM	G000-1070

*HAMMER MOUNTED AUTO LUBE ONLY

CORRECT USE OF NPK TOOLS

APPLICATION OF DOWNFORCE TO THE TOOL

When the hammer piston is accelerated by the gas pressure of the hammer, the gas pressure also generates a reaction force, or recoil, which tries to raise the hammer. To resist this reaction, the hammer must be held firmly against the material to be broken. This also ensures the most efficient transfer of energy from the tool to the material to be broken.

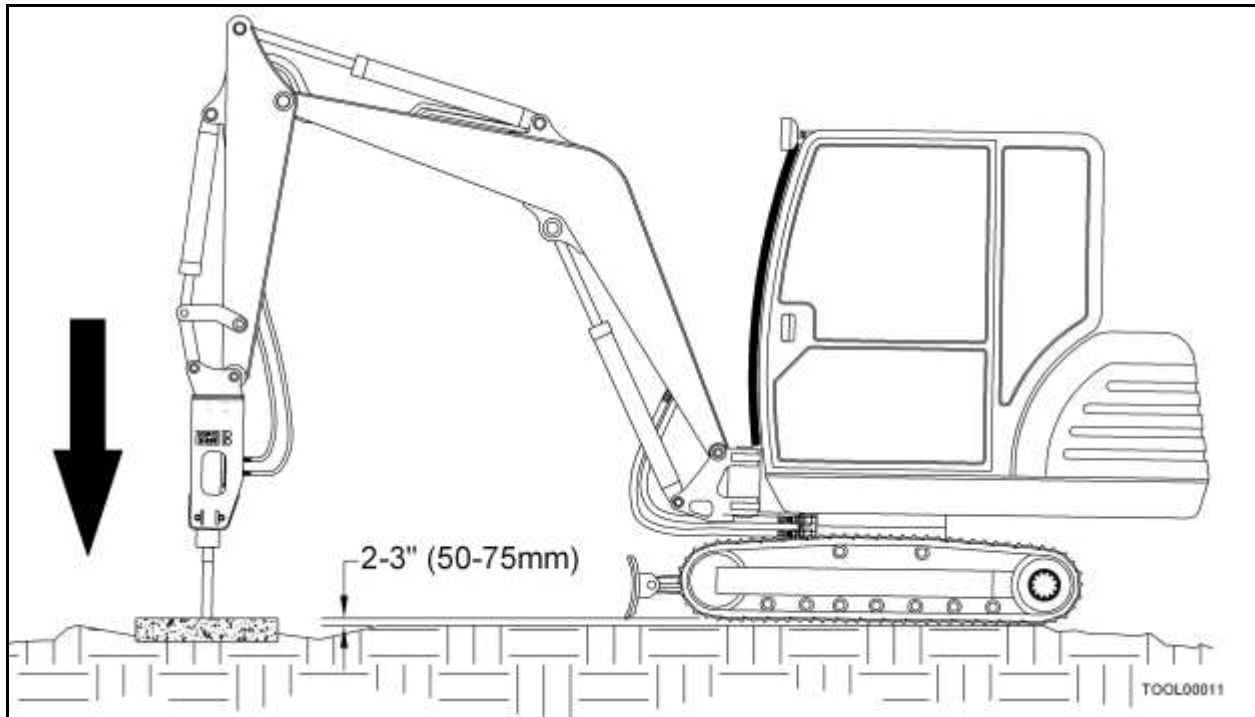

Apply downforce, lift the carrier 2 – 3" (50 – 75 mm).

Raise the front of the machine slightly by applying downforce on the demolition tool. Press the control lever or the foot pedal to start the NPK HYDRAULIC HAMMER.

CAUTION

Applying excessive force to the hammer will raise the carrier too high and jolt the operator when the material breaks. Let the NPK HYDRAULIC HAMMER do the work.

CORRECT USE OF NPK TOOLS, CONTINUED


APPLICATION OF DOWNFORCE TO THE TOOL (CONTINUED)

1. CORRECT
2. INCORRECT

F: The direction of force from the boom (the direction tangent to the arc of the boom).

P: Penetration direction of the demolition tool.

A: Fulcrum.

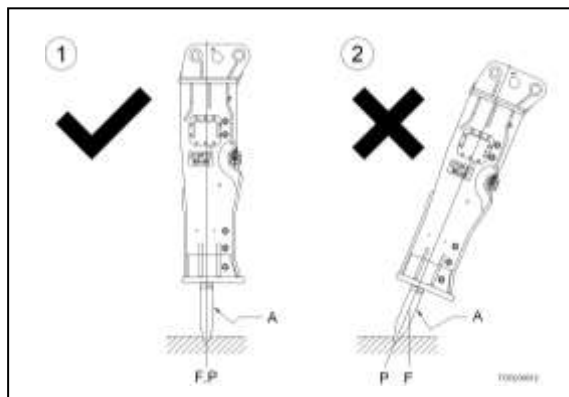

DO NOT USE BOOM DOWNFORCE WHEN SLANT HAMMERING.


For the most efficient demolition, align the direction of force (F) from the boom with the penetration direction (P) of the tool. **Note Fig. 2**, applying boom downforce when the hammer is at an angle, decreases the transfer of energy from the piston to the rock and increases the bending forces at the fulcrum of the tool. This unnecessary added stress leads to the following problems:

1. Premature bushing wear and/or tool breakage
2. Breakage of tie rods
3. Breakage of bracket bolts

When the tool binds or the working angle is incorrect, the sound of the hammer changes.

Keep the boom direction of force in the same direction the tool is penetrating. Use the boom cylinder to preload the hammer (apply downpressure), and use the bucket and stick cylinders for alignment. Keep the tool tangent to the arc of the boom. See Figures 10A, 10B, and 10C on page 14.

“A” = TANGENTIAL DIRECTION
“B” = ARC OF BOOM

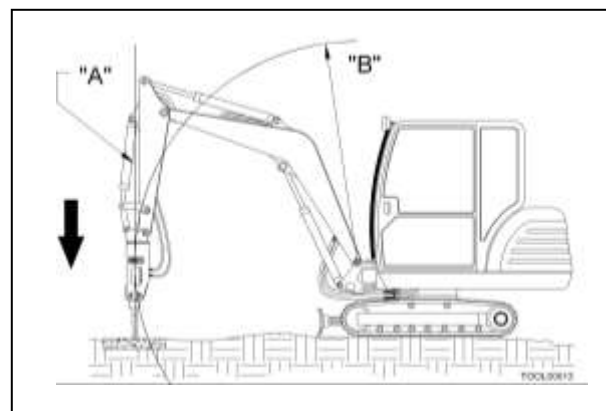

CORRECT USE OF NPK TOOLS, CONTINUED

BENDING MOMENT GENERATION

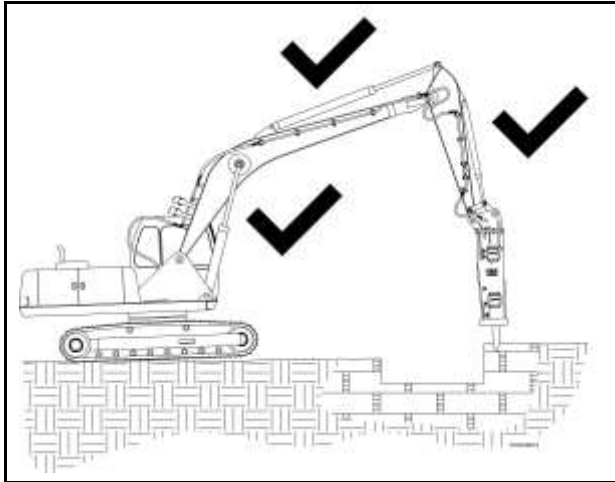


FIG. 10A

Use proper positioning and proper cylinders when loading hammer against material.

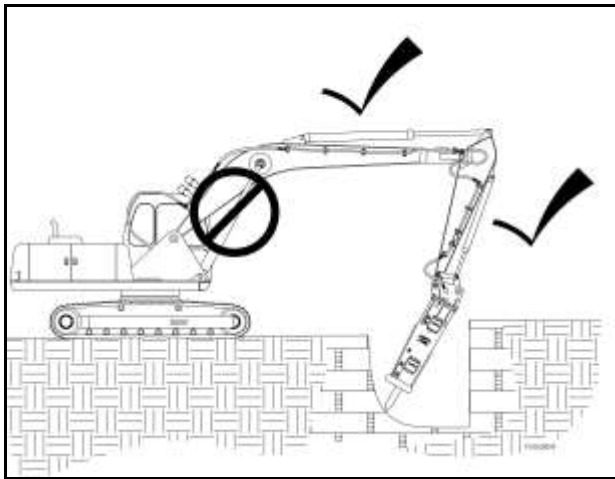


FIG. 10B

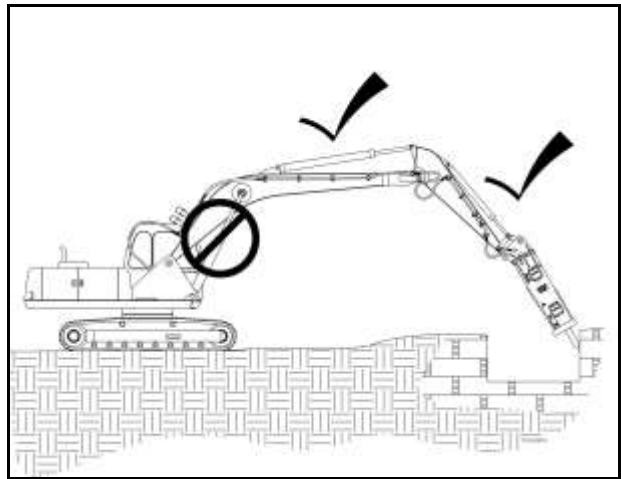


FIG. 10C


ATTENTION

Do not use boom downforce when slant hammering. Use bucket and stick cylinders to apply force to the tool in a straight line.


CORRECT USE OF NPK TOOLS, CONTINUED

BENDING MOMENT GENERATION (CONTINUED)

If the hammer is operated at an angle (slant hammering) to the downforce (A) produced by the excavator, a bending load (B) is placed on the tool. As the tool is twisted in the tool holder, it is forced into excessive heavy contact with the upper (C) and lower (D) tool holder bushings. This causes severe galling of the tool and wears the tool bushings into an “egg” shape. Severe galling of the tool creates stress cracks which will shorten the life of the tool. Impact shock waves traveling down the tool become concentrated at the points of contact between the tool and tool bushings. Under severe conditions, this will cause the tool to break instantly, see pages 17 and 18.

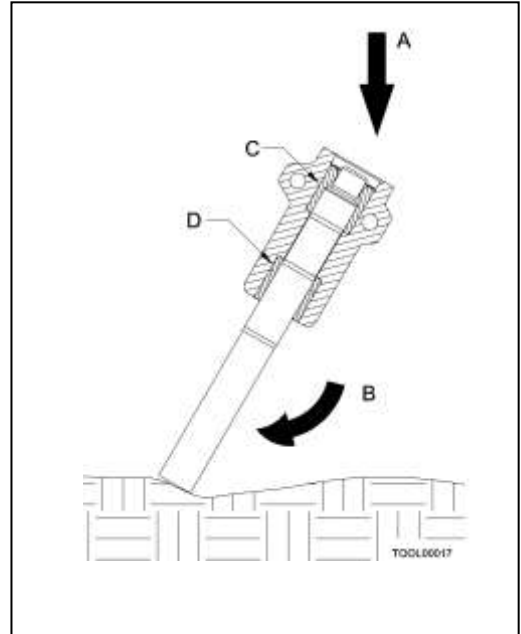



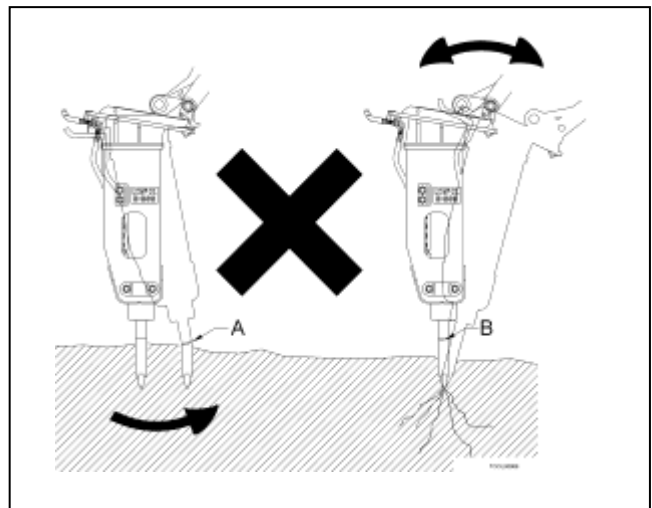

Do not operate the boom, stick, or bucket cylinders excessively while firing the hammer. Putting the tool into a binding load (A) or prying (B) with the tool will cause premature breakage of the tool. During operation, it may be necessary to move the hammer in a slight rocking motion (towards and away from the carrier) so that the powder build up around the tool tip can be relieved. **DO NOT ROCK EXCESSIVELY!**



TYPES AND APPLICATIONS OF TOOL





Choose and use the tool that is most suited for the work. Using a tool not suited for the work not only reduces the working efficiency but may cause chipping, deformation, or other damage to the tool.

STANDARD TOOLS

TOOL TYPE	SHAPE	APPLICATIONS
CHISEL Crosscut (FX)		<ul style="list-style-type: none"> • Controlled breakage of concrete • Layered sedimentary rock -trenching, oversize • General demolition • Cutting casting gates
MOIL (P)		<ul style="list-style-type: none"> • Concrete structures – columns, etc. • Soft material
BLUNT (E)		<ul style="list-style-type: none"> • Concrete slab, bridge decking • Oversize • Slag removal
CORE (PC)		<ul style="list-style-type: none"> • Hard rock • General demolition

*The crosscut (FX) tool cuts at right angle, or crosswise, to the stick and boom of the excavator.

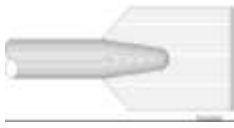ACCESSORY TOOLS


SPECIALTY TOOL	SHAPE	APPLICATIONS
FROST CUTTER Crosscut (SX) In-Line (SY)		<ul style="list-style-type: none"> • Edge of trenching • Frost cutting
ADAPTER TOOLS (use with Tamper Plate and Post/Pipe Drivers)		<ul style="list-style-type: none"> • For attachments listed below
TAMPER PLATE (use with adapter tool)		<ul style="list-style-type: none"> • Soil compaction • Driving sheeting
POST and PIPE DRIVERS (use with adapter tool)		<ul style="list-style-type: none"> • Driving guard rails • Driving fence posts

TOOL BREAKAGE

Description of tool failures, causes, preventative measures, and application of warranty.

TOOL BREAKAGE DUE TO EXCESSIVE BENDING MOMENT

If the tool is subjected to excessive bending moment caused by slant hammering or prying, the tool will break. Tool breaks will generally resemble one of the following examples:

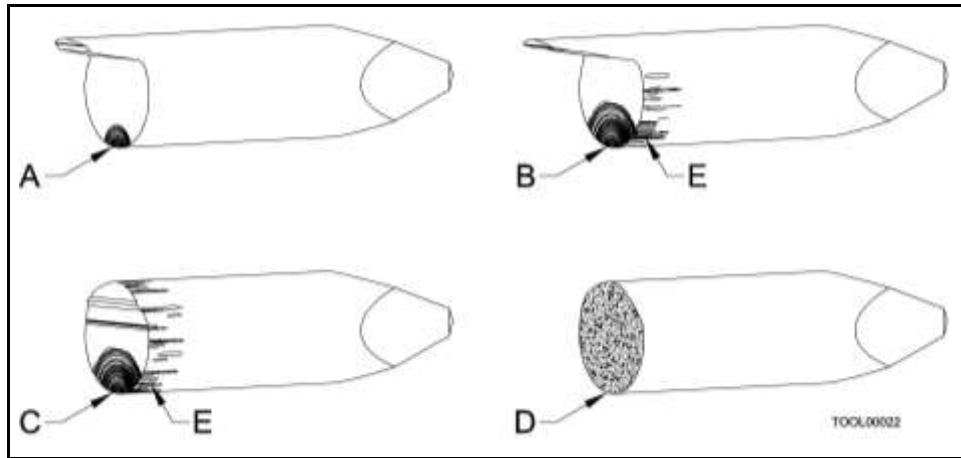

A. Starting point of crack that leads to breakage.	B. Starting point of break.	C. Starting point of break.
D. Sudden break from instant overload condition, (face will look very dull gray).		E. Galling

CHARACTERISTICS OF THE BROKEN SECTION

1. The starting point of a fatigue fracture is on the surface of the tool and located at the front or rear side of the tool, with the hammer installed on the excavator and viewed from the cab.
2. The tool has galled areas on its surface. The galling initiates a surface crack from which the fatigue fracture starts. The stress cracks, combined with bending loads and impact shock, can break the tool.

PREVENTATIVE MEASURES

1. Properly position the hammer so as not to develop a bending moment in the tool.
2. Apply sufficient grease to prevent the tool from developing cracks due to galling. This will also assure longer tool bushing life.


WARRANTY

NPK Warranty does not apply to this type of failure.

TOOL BREAKAGE, CONTINUED

TOOL BREAKAGE DUE TO EXCESSIVE WEAR OF THE TOOL HOLDER BUSHINGS

If the hydraulic hammer is used with tool holder bushings worn beyond specifications, the tool will be at an excessive angle to the piston at the moment of impact. The entire force of the piston is concentrated in a small area of the impact head of the tool (Fig. 1). This results in the impact head area being chipped or broken (Fig. 2 & 3). With the tool at an angle, and in excessive side loading contact with the tool holder bushings, the shock load traveling down the tool is unevenly concentrated (Fig. 1). This can result in the tool breaking through the retaining pin slot (Fig. 4).

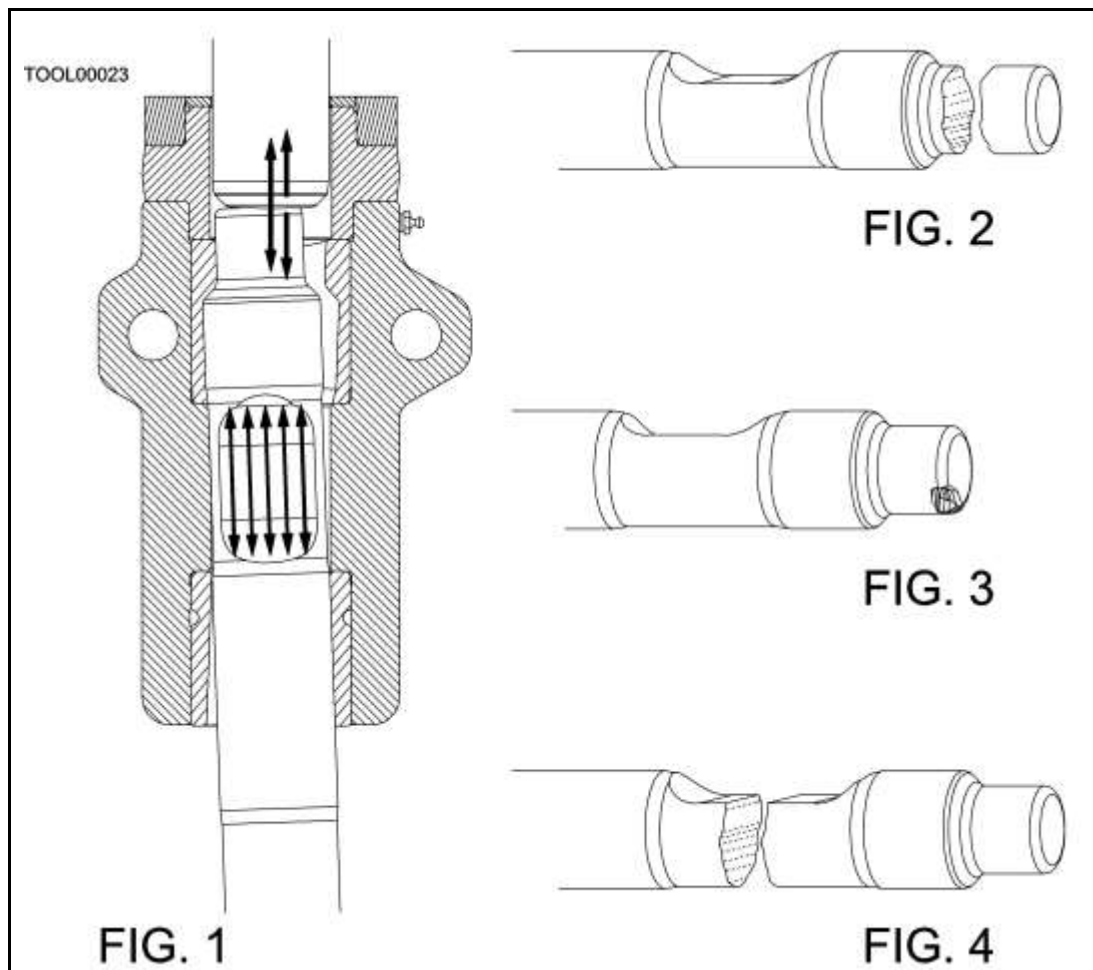


TOOL BREAKAGE, CONTINUED

TOOL BREAKAGE DUE TO EXCESSIVE WEAR OF THE TOOL HOLDER BUSHINGS (CONTINUED)

PREVENTATIVE MEASURES

Replace the tool holder bushings when the clearance (C) reaches the maximum limit listed below. See the NPK Hydraulic Hammer Service Manual for maximum diameter (B) tool bushing (A) wear chart and minimum tool diameter (D).

MODEL	MAXIMUM CLEARANCE (C) INCH (mm)
PH06, PH07	1/8 (3)
H06X, H08X	3/16 (5)
H1XA, H2XA, E200, E201, E202, E203, E204, E205, GH06, GH07, GH1, GH2, GH3, GH4, PH1, PH2, PH3, PH4	1/4 (6.5)
H3XA, H4XE, H4XL, H6XA	5/16 (8)
H7X, H8XA	11/32 (9)
H10XB, H12X, E207, E208, E210A, E213, GH6, GH7, GH9, GH10	3/8 (10)
H16X, H20X, E216, E220, E225, GH12, GH15, GH18	1/2 (13)
H30X, E240A, E260A, GH23, GH30, GH40, GH50	5/8 (16)

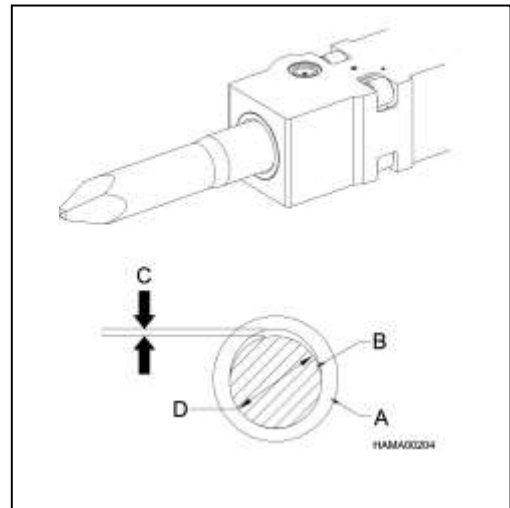

- A. Tool Bushing
- B. Tool
- C. Clearance
- D. Tool Diameter


WARRANTY

NPK Warranty does not cover tool failure caused by worn tool holder bushings.

TOOL BREAKAGE, CONTINUED

A. CHIPPING IN RETAINING PIN SLOT

The tool may become chipped at the upper end of the retaining pin slot where it contacts the retaining pin. Free standing oversize rock may sometimes be broken with only a few hammer blows. If the operator does not stop hammering immediately, the tool will hit the retaining pin (blank hammering), and can chip the upper end of the retaining pin slot.

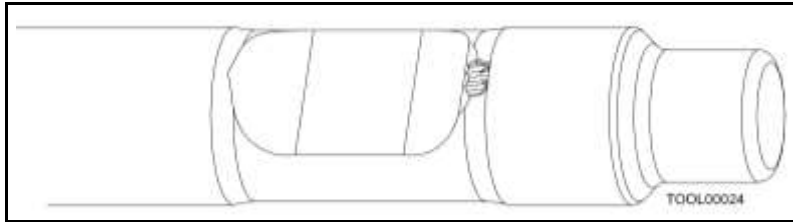


PREVENTATIVE MEASURES

When the material is broken, stop operating the hammer immediately. Periodically check the tool and grind smooth any chipped areas to prevent stress cracks.

B. DEFORMATION OF THE RETAINING PIN SLOT SIDES

The tool may become chipped or deformed in the area where it is in contact with the retaining pin. As the tool breaks material, it will try to follow any fracture lines in the material (Fig. 1). This causes a chisel point tool to twist in the tool holder. The retaining pin limits how far the tool can twist. If this happens often enough, the pin contact area of the tool can become chipped (Fig. 2) or deformed (Fig. 3).

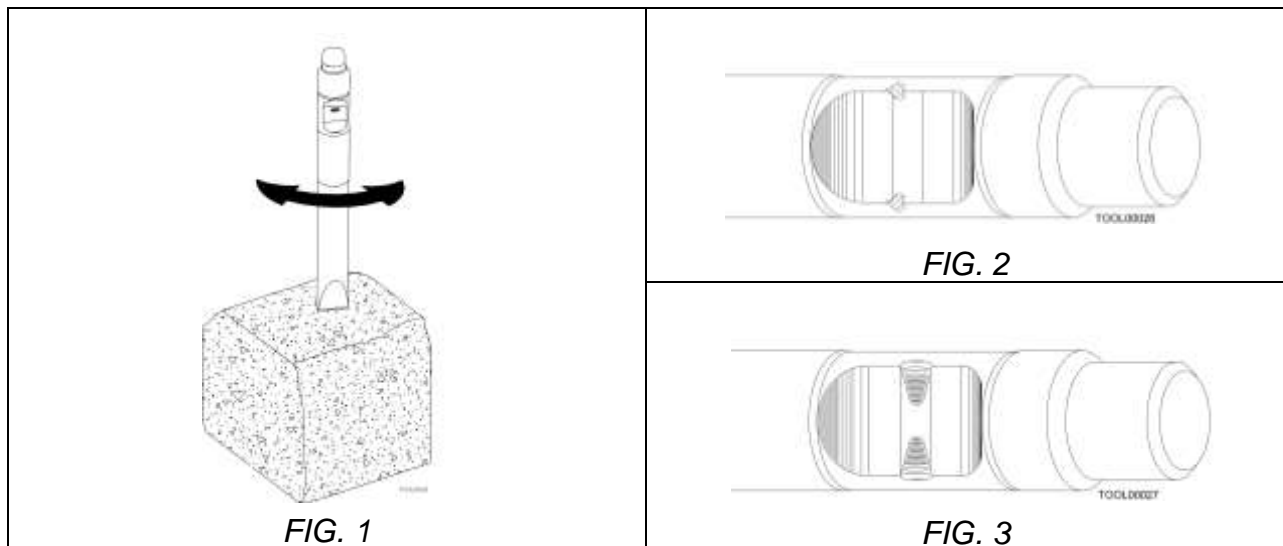

PREVENTATIVE MEASURES



The operator should place the chisel point in line with fractures or laminations in the material, not at an angle. The tool should be checked periodically for chipped areas. Grind smooth any chipped areas to prevent stress cracks in the tool.

TOOL BREAKAGE, CONTINUED

C. DEFORMATION OF THE TOOL TIP



Hammering continuously in one position for over 30 seconds will overheat the tool tip. If this is done repeatedly, the tip will lose temper and mushroom. Overheating wears the tip faster, and can allow the tip to chip.

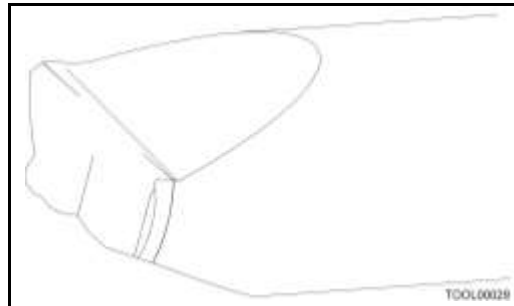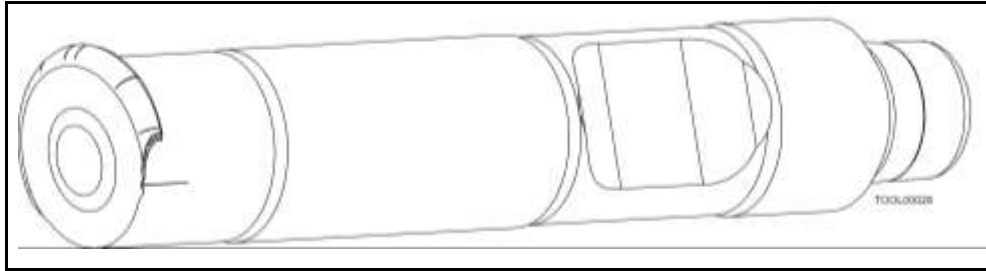

PREVENTATIVE MEASURES


Move tool position if material is not broken after 30 seconds of hammering. If the material still resists breaking, a larger hammer may be required.

TOOL BREAKAGE, CONTINUED

D. CHIPPING OF A MOIL POINT TOOL TIP



Moil ("P") tools are intended for use on concrete or soft rock. The use of moil tools on hard rock may result in the point being chipped.

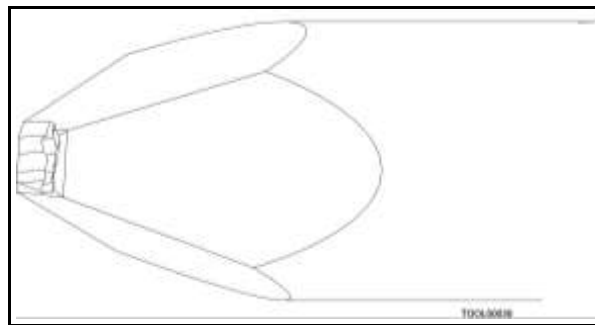


PREVENTATIVE MEASURES

Use a chisel point ("FX" or "FY") tool or a larger size hammer.

E. CHIPPING OF A CHISEL TOOL TIP

Chisel tool tips may be chipped due to hammer being undersize for application. Overheating tool by hammering for more than 30 seconds in one spot can cause chipping.

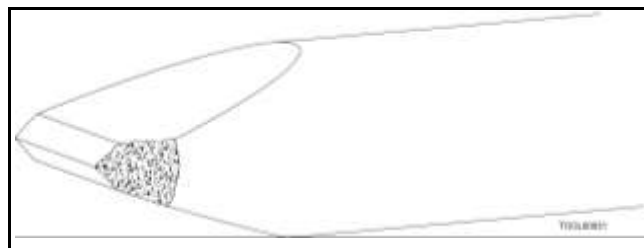

PREVENTATIVE MEASURES

Use correct size hammer for job conditions. Do not hammer for more than 30 seconds without moving hammer.

WARRANTY

NPK Warranty does not cover types A, B, C, D, & E problems.

TOOL BREAKAGE, CONTINUED

TEMPERATURE RELATED TOOL PROBLEMS

LOW TEMPERATURE

Metallic material becomes brittle in a low temperature environment and particularly sensitive to impact stress.

PREVENTATIVE MEASURES

Warm the tool before starting to operate the hammer when temperature is below 32° F, (0° C).

WARRANTY

NPK Warranty does not cover this type of failure.

EXCESSIVE SLANT HAMMERING


When constant slant hammering is performed while using boom downforce, the tool may become deformed as shown in the picture below.

HIGH TEMPERATURE

When the tool is used in a high temperature environment, such as for slag removal from a furnace, the tool may be deformed as shown in the picture below.

PREVENTATIVE MEASURES:

Used compressed air to keep the tool cool enough not to deform.

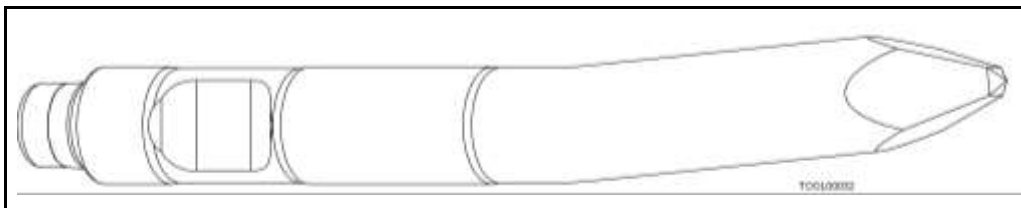

WARRANTY

NPK Warranty does not cover this type of problem.

TOOL BREAKAGE, CONTINUED

TOOL BREAKAGE DUE TO CORROSION

Corrosion on the tool surface causes stress concentrations in the corroded area and a fatigue fracture can occur. These fractures, combined with impact stress can lead to tool breakage.

PREVENTATIVE MEASURES


After using the tool in salt water, after exposing it to a corrosive environment, or before long term storage, be sure to rinse with fresh water. Dry the tool and coat it with grease to protect it from corrosion.

WARRANTY

NPK Warranty does not cover this type of failure.

TOOL BREAKAGE DUE TO DEFECTIVE MATERIAL

If metal fatigue originates from the interior, not the exterior, the material has some defect and fatigue will break the tool. The picture below illustrates the broken section. The starting point of breakage (A) is inside the tool, not on the surface.

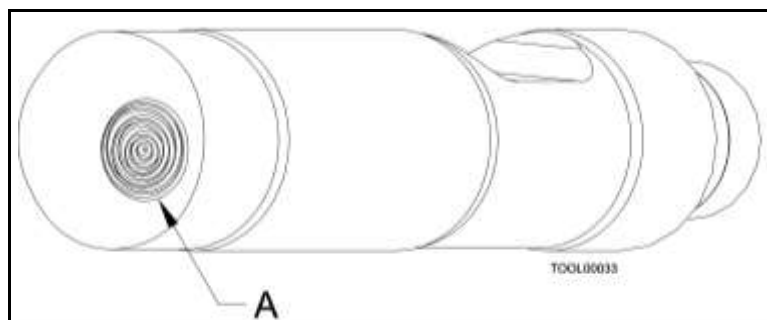

WARRANTY


NPK Warranty covers this type of failure.

CHISEL TOOL SHARPENING

Worn chisel tools can be sharpened by machining according to the dimensions below.



DO NOT hardface or sharpen the tool point with a cutting torch! Sharpen only by milling or grinding, using sufficient coolant.

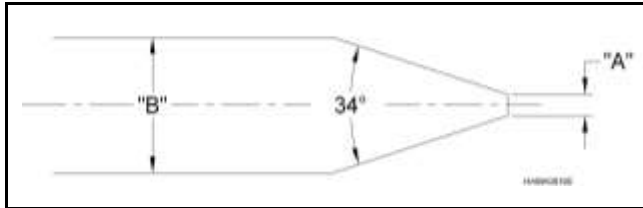

PH SERIES

MODEL NO.	A		B	
	inch	mm	inch	mm
PH06	.39	10	1.65	42
PH07	.39	10	1.85	47
PH1	.39	10	2.24	57
PH2	.39	10	2.60	66
PH3	.39	10	2.99	76
PH4	.79	20	3.38	86

E SERIES

MODEL NO.	A		B	
	inch	mm	inch	mm
E200	.25	6.4	1.57	40
E201	.25	6.4	1.77	45
E202	.38	9.7	2.17	55
E203	.38	9.7	2.52	64
E204	.38	9.7	2.91	74
E205	.50	12.7	3.31	84
E207	.50	12.7	4.09	104
E208	.62	15.7	4.50	114
E210A	.62	15.7	4.88	124
E213	.75	19	5.12	130
E216	.75	19	5.50	140
E220	.75	19	5.91	150
E225	.75	19	6.42	163
E240A	.75	19	7.09	180
E260A	.75	19	7.88	200


GH SERIES

MODEL NO.	A		B	
	inch	mm	inch	mm
GH06	.25	6.4	1.57	40
GH07	.25	6.4	1.77	45
GH1	.38	9.7	2.17	55
GH2	.38	9.7	2.52	64
GH3	.38	9.7	2.91	74
GH4	.50	12.7	3.31	84
GH6	.50	12.7	4.09	104
GH7	.62	15.7	4.50	114
GH9	.62	15.7	5.00	127
GH10	.75	19	5.12	125
GH12	.75	19	5.50	140
GH15	.75	19	5.91	150
GH18	.75	19	6.42	160
GH23	.75	19	6.69	170
GH30	.75	19	7.09	180
GH40	1.00	25	7.87	200
GH50	1.00	25	8.27	210

H SERIES

MODEL NO.	A		B	
	inch	mm	inch	mm
H06X	-	-	-	-
H08X	-	-	-	-
H1XA	.38	9.7	2.12	53.8
H2XA	.38	9.7	2.50	63.5
H3XA	.38	9.7	3.00	76.2
H4XE/H4XL	.50	12.7	3.25	82.3
H6XA	.50	12.7	3.75	95.3
H7X	.50	12.7	4.12	104.6
H8XA	.62	15.7	4.50	114.3
H10XB	.62	15.7	5.00	127.0
H12X	.75	19	5.38	136.7
H16X	.75	19	5.75	146.1
H20X	.75	19	6.12	155.4
H30X	1.00	25.4	6.88	174.8

STANDARD LENGTH FOR NPK TOOLS

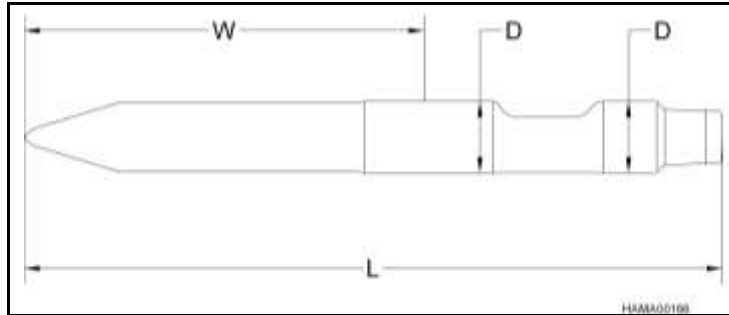

L = Length of tool from top to bottom.

W = Length of tool exposed from bottom of tool bushing to end of tool.

D = Diameter of bearing surface of tool.

MODEL	NEW TOOL DIAMETER (D)	
	inch	mm
PH06	1.65	42
PH07	1.85	47
PH1	2.24	57
PH2	2.6	66
PH3	2.99	76
PH4	3.38	86

MODEL	NEW TOOL DIAMETER (D)	
	inch	mm
E200	1.63	41.4
E201	1.83	46.6
E202	2.23	56.6
E203	2.58	65.6
E204	2.98	75.6
E205	3.37	85.6
E207	4.16	105.6
E208	4.6	116
E210A	5.0	126
E213	5.4	136
E216	5.9	146
E220	6.2	156
E225	6.5	165
E240A	7.2	184
E260A	8.0	204

MODEL	NEW TOOL DIAMETER (D)	
	inch	mm
GH06	1.63	41.4
GH07	1.83	46.6
GH1	2.23	56.6
GH2	2.58	65.6
GH3	2.98	75.6
GH4	3.37	85.6
GH6	4.16	105.6
GH7	4.6	116
GH9	5.00	126
GH10	5.35	136
GH12	5.75	146
GH15	6.14	156
GH18	6.50	165
GH23	6.85	174
GH30	7.20	184
GH40	8.03	204
GH50	8.43	214



MODEL	NEW TOOL DIAMETER (D)	
	inch	mm
H06X	1.56	39.7
H08X	1.76	44.7
H1XA	2.23	56.7
H2XA	2.55	64.7
H3XA	2.94	74.7
H4XE/4XL	3.53	89.7
H6XA	3.77	95.7
H7X	4.16	105.7
H8XA	4.56	115.7
H10XB	4.95	125.7
H12X	5.34	135.7
H16X	5.74	145.7
H20X	6.13	155.7
H30X	6.88	174.7

NOTE:

Minimum tool length is determined by the depth of material penetration that is required.

TOOL IDENTIFICATION

NPK demolition tools can be identified by the numbers found stamped in the retaining pin slot area. These numbers **must** be included in all warranty correspondences regarding a broken tool. Photos **must** also be included.

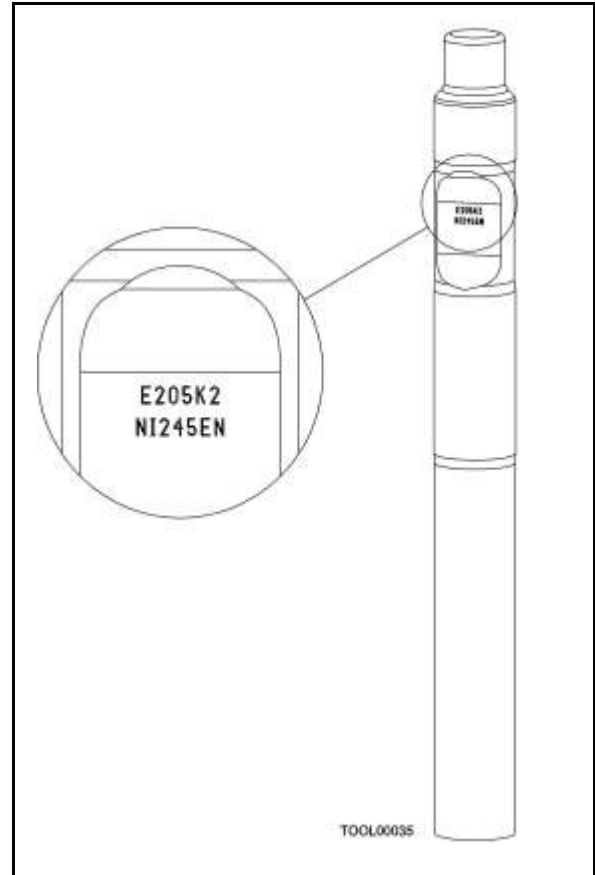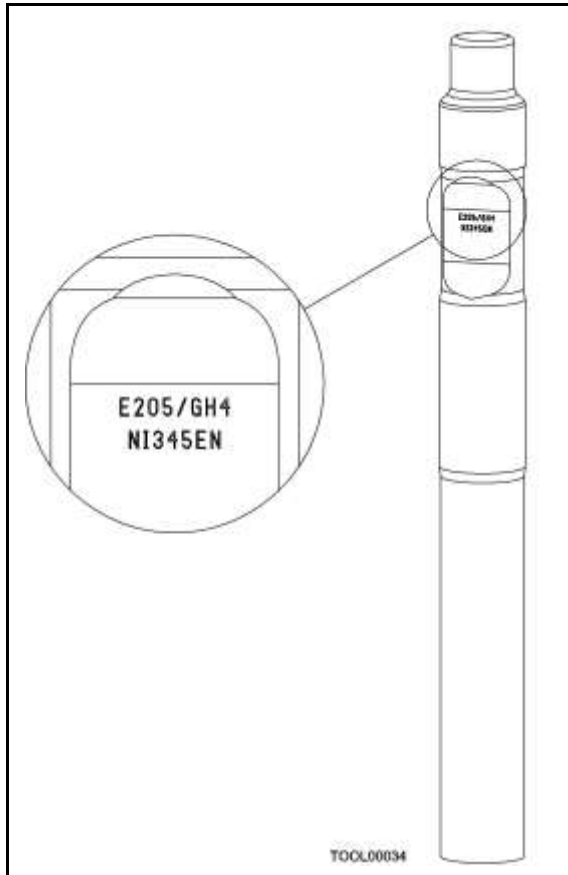

WARRANTY STATEMENT

APPLICATION FOR WARRANTY MUST BE
MADE WITHIN 30 WORKING DAYS OF
FAILURE / REPAIR.

NPK

WARRANTY

"Use Genuine NPK Parts" 1/19

STANDARD DEMOLITION AND ACCESSORY TOOLS

STANDARD DEMOLITION and ACCESSORY TOOLS WARRANTY (30 days)

NPK CONSTRUCTION EQUIPMENT, INC. ("NPK") warrants that new Standard Demolition Tools, and other Standard Accessory Tools sold by NPK will be free from defects in material or workmanship for a period of thirty (30) days, starting from the date of installation. NPK reserves the full right to determine if, and to what extent, warranty adjustments may be made for breakage of the demolition or other accessory tools. **NPK Tool Warranty does not cover labor or travel expenses.**

THIS WARRANTY DOES NOT APPLY TO:

- Custom or special application tools which are excluded from warranty.

NPK RESPONSIBILITY


NPK will, at its option, replace with a new or reconditioned tool, any warranted tool that fails by reason of defective material or workmanship, free of charge delivered at a place of business of an NPK Dealer. Tool breakage is specifically covered ONLY for straight across breakage as shown at locations A.

For warranted tool failures, a prorated credit, up to 80% maximum, will be issued for tools with tip wear greater than 50 mm on chisel and mol points, or 30 mm on blunt end tools. Note: Parts replaced under warranty become the property of NPK.



USER RESPONSIBILITY

- Photos and all numbers from retaining pin slot must accompany all warranties submitted to NPK. These photos can be 35 mm, polaroid, or digital.
- The installer, user, operator, repairer, assumes responsibility to read, understand and comply with NPK's written INSTALLATION, OPERATOR and SERVICE INSTRUCTIONS.
- All labor costs.
- Any expense incurred by field repair.
- Tool failures as shown at locations tb. (see NPK Operators Manual for correct operating procedures.)

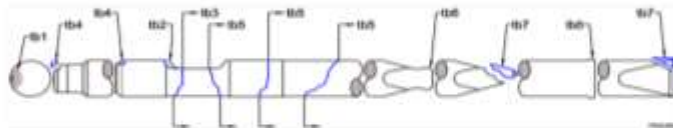

CAUSE OF FAILURE

- tb1 - Typical break from bending overload.
- tb2 and tb3 - repeated blank hammering.
- tb3 - bending overload due to excessive wear of the tool bushings.
- tb4 - corner loading due to excessive wear of the tool bushings.

- tb5 - bending overload from excessive prying or slant hammering.
- tb6 - deformation from overheating by hammering in the same position for more than 30 seconds.
- tb7 - chipped, due to wrong application, or overheating by hammering in same position for over 30 seconds.

THESE WARRANTIES DO NOT COVER FAILURES RESULTING FROM:

- Installation, alteration, operation, maintenance, repair or storage which NPK judges improper.
- Inadequate lubrication.
- Exceeding the tool and/or tool bushing wear limit.
- Unreasonable delay in making a repair after being notified of a potential product problem.

THESE WARRANTIES SPECIFICALLY EXCLUDE:

- Any tool which is altered, welded, hardfaced or resharpened.
- Replacement due to tip or shank wear.
- Installations not approved by NPK.
- Use of parts not sold by NPK. **THE USE OF "WILL FIT" PARTS WILL VOID ALL NPK WARRANTIES.**
- Parts shipping charges in excess of those which are usual and customary. (Air freight, unless pre-approved, will not be covered.)
- Duties, brokerage fees, and local taxes.

WARRANTY REPAIRS DO NOT EXTEND THE STANDARD WARRANTY PERIOD.

Internet: www.npkce.com

As used in this warranty the term NPK means NPK CONSTRUCTION EQUIPMENT, INC., WALTON HILLS, OHIO, U.S.A.

LIMITATIONS AND EXCLUSIONS

Violation of any federal, provincial, state or local laws, ordinances, rules or regulations, or removal or alteration of product serial numbers void NPK's written product warranties.

Application for warranty must be made within 30 days of failure / repair.

THIS PRODUCT MUST BE USED IN A SAFE AND LAWFUL MANNER IN COMPLIANCE WITH APPLICABLE OSHA REGULATIONS.

The written product warranties made by NPK set forth NPK's only obligations with respect to any claims of failure, defects or deficiencies in products sold by NPK. **NPK MAKES NO OTHER WARRANTIES OR REPRESENTATIONS WHATSOEVER, EXPRESS OR IMPLIED, OF THE QUALITY, PERFORMANCE, DURABILITY, MATERIALS, WORKMANSHIP, SUITABILITY, CONDITION, DESIGN OR UTILITY OF PRODUCTS SOLD BY NPK, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, ALL SUCH OTHER WARRANTIES AND REPRESENTATIONS BEING HEREBY EXPRESSLY EXCLUDED. NPK SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, COSTS, LOSSES OR LIABILITIES ON ACCOUNT OF DELAY OR DOWNTIME.**

DISCLAIMER REGARDING OTHER REPRESENTATIONS OR WARRANTIES

No person is authorized to grant any other warranties or to assume any other liability on NPK's behalf unless made or assumed in writing by an officer of NPK. No person is authorized to grant any warranties or to assume any liabilities on the seller's behalf unless made or assumed in writing by the seller.

NPK

7550 INDEPENDENCE DRIVE WALTON HILLS, OHIO 44146

PHONE: 440-232-7900

FAX: 440-232-6294
